

Installation & CARE

2010-2012 FORD FUSION LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

¼" Ratchet	T15 socket	10 mm socket	Trim Pad Remover
			

PRODUCT NUMBER

LT-FUS10JMLED-TM
 LT-FUS10RLED-TM
 LT-FUS10GLED-TM
 LT-FUS10BBLED-TM
 LT-FUS10BKLED-TM



LET'S START THE INSTALLATION




STEP 1A

Remove the two plastic fasteners on the left




STEP 1B

Remove the two plastic fasteners on the right

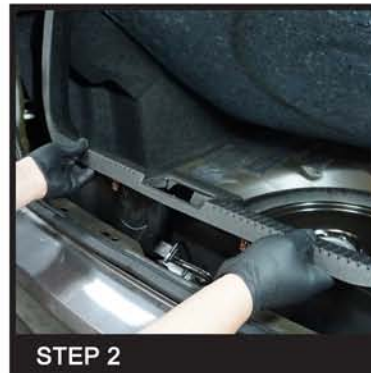

STEP 2

Pull up to remove the trim cover

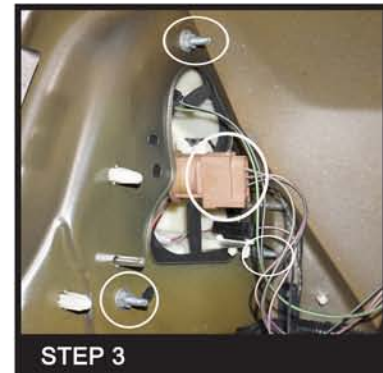

STEP 3

Disconnect the tail light harness and remove the three 10mm mounting nuts



STEP 4

Remove the factory tail light housing




STEP 5

Remove the light sockets and the plastic trim from the factory tail light



STEP 6

Install the plastic trim to the new tail light

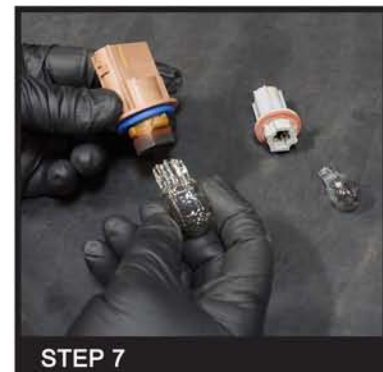

STEP 7

Take out the light bulbs from the light sockets



STEP 8

Install the light sockets to the new tail light



STEP 9

Install the tail light foam gasket



STEP 10

Install the tail light resistor



STEP 11

Install the tail light housing




STEP 12

Fasten the three 10mm mounting nuts



STEP 13

Connect the tail light harness

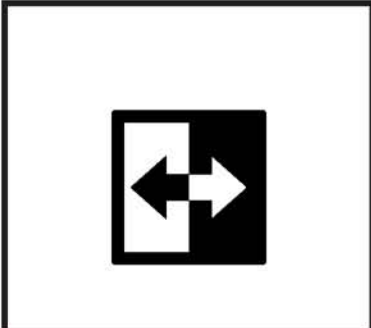

STEP 14

Please repeat the steps from 3 to 13 for the opposite side



STEP 15

Reinstall the trim cover



STEP 16A

Reinstall the two plastic fasteners on the left



STEP 16B

Reinstall the two plastic fasteners on the right



STEP 17

Close the trunk and complete installation

