

# INSTALLATION & CARE

## 2008-2010 FORD F250 SWITCHBACK SEQUENTIAL HEADLIGHT INSTALLATION INSTRUCTION

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

### PRODUCT NUMBER

2LHP-F25008-G2-TM  
 2LHP-F25008JM-G2-TM  
 2LHP-F25008SM-G2-TM  
 2LHP-F25008G-G2-TM

### LET'S START THE INSTALLATION



**STEP 1**

Remove the two 7mm headlight mounting bolts near the radiator



**STEP 2**

Remove the 7mm headlight mounting bolt at the bottom of the headlight



**STEP 3**

Remove the 7mm headlight mounting bolt at the top of the headlight



**STEP 4**

Unseat the factory headlight housing



**STEP 5**

Disconnect the headlight harness and remove the factory headlight housing



**STEP 6**

Remove the parking light socket and the signal light socket from the factory headlight



**STEP 7**

Remove the signal bulb from the signal light socket



**STEP 8**

Insert the signal light connector from the new headlight housing to the signal light socket, (+) to (+)



**STEP 9**

Install the parking light socket with the parking light bulbs to the new headlight housing



**STEP 10**

Use alcohol to clean the metal surface to apply the resistor




**STEP 11**

Set the resistor on the metal area



**STEP 12**

Connect the resistor wires

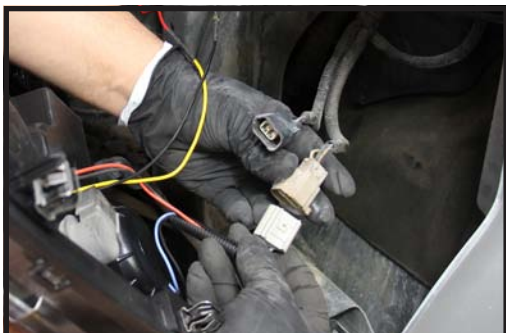

**STEP 13**

Connect the headlight harness, and seat the new headlight assembly in place



**STEP 14**

Reinstall the two 7mm headlight mounting bolts near the radiator




**STEP 15**

Reinstall the 7mm headlight mounting bolt at the top of the headlight



**STEP 16**

Reinstall the 7mm headlight mounting bolt at the bottom of the headlight

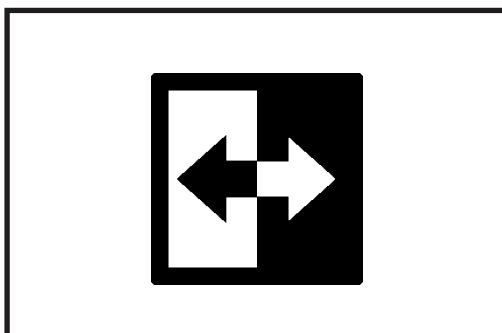

**STEP 17**

Please repeat the steps from 1 to 16 for the opposite side



**STEP 18**

Close the hood to complete the installation