

Installation & CARE

2015 FORD F150 PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	Plastic Pry bar	7 mm Socket	1/4" Socket Extension
			

PRODUCT NUMBER

2LHP-F25008-RS
2LHP-F25008JM-RS
2LHP-F25008G-RS
2LHP-F25008SM-RS

LET'S START THE INSTALLATION



STEP 1

Remove the two 7mm headlight mounting bolts near the radiator



STEP 2

Remove the 7mm headlight mounting bolt at the bottom of the headlight



STEP 3

Remove the 7mm headlight mounting bolt at the top



STEP 4

Unseat the factory headlight housing



STEP 5

Disconnect the headlight harness and remove the factory headlight housing



STEP 6

Remove the parking light socket and the signal light socket from the factory headlight



STEP 7

Remove the T10 light bulbs from the parking light socket




STEP 8

Reinstall the parking light socket and signal light socket to the new headlight housing



STEP 9

Connect the headlight harness and seat the new headlight assembly in place

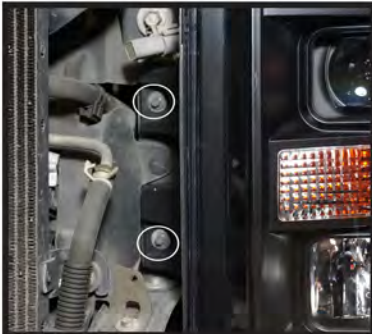

STEP 10

Reinstall the two 7mm headlight mounting bolts near the radiator




STEP 11

Reinstall the 7mm headlight mounting bolt at the top of the headlight




STEP 12

Reinstall the 7mm headlight mounting bolt at the bottom of the headlight

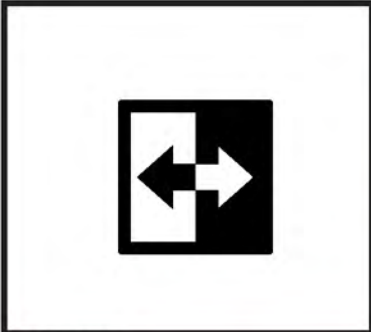

STEP 13

Please repeat the steps from 1 to 12 for the opposite side

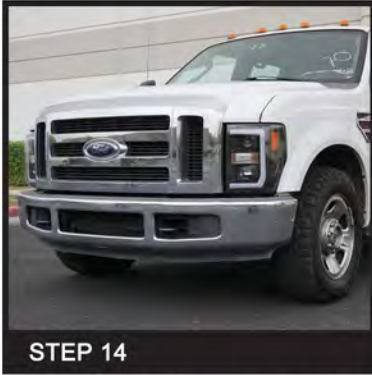

STEP 14

Close the hood to complete installation

