

# Installation & CARE

## 2014-2015 GMC SIERRA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	7 mm socket	10 mm socket	T15 Torx Screwdriver
			
1/4" extension			
			

### PRODUCT NUMBER

2LHP-SIE14-TM  
2LHP-SIE14JM-TM  
2LHP-SIE14G-TM



### LET'S START THE INSTALLATION



**STEP 1**

Raise hood



**STEP 2**

Remove eleven radiator cover fasteners




**STEP 3**

Remove radiator cover



**STEP 4**

Remove four front grille 10mm bolts

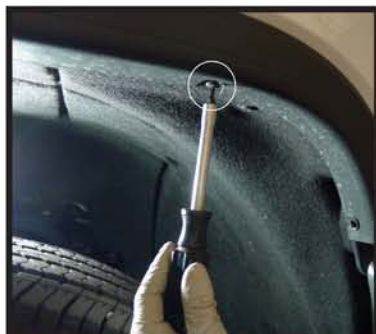

**STEP 5**

Remove one ST15 fender flare screw



**STEP 6**

Remove one fender flare 7mm bolt



**STEP 7**

Remove one 7mm front bumper trim screw per side



**STEP 8**

Loosen tab to remove front bumper trim more easily



**STEP 9**

Separate fender flare retaining piece if needed. Be sure to replace double sided tape if necessary



**STEP 10**

Remove front bumper trim



**STEP 11**

Remove four 10mm grille bolts



**STEP 12**

Remove front grille




**STEP 13**

Remove four 10mm headlight bolts



**STEP 14**

Remove headlight and disconnect connector

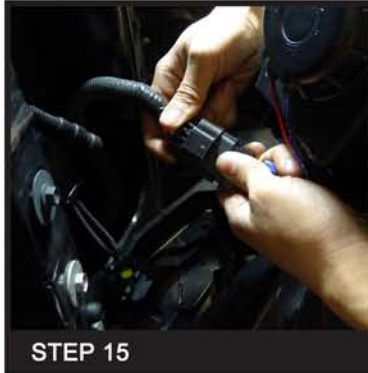

**STEP 15**

Connect headlight connector



**STEP 16**

Install headlight



**STEP 17**

Reinstall four 10mm headlight bolts



**STEP 18**

Please repeat the steps from 13 to 17 for the opposite side



**STEP 19**

Reinstall front grille




**STEP 20**

Reinstall four 10mm front grille bolts



**STEP 21**

Reinstall front bumper trim

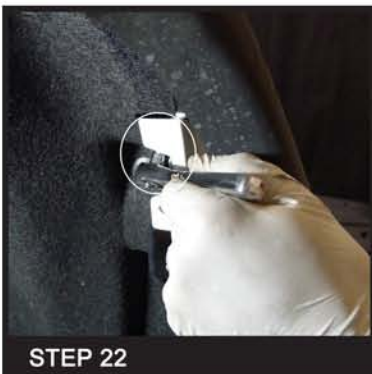

**STEP 22**

Reinstall one 7mm front bumper trim screw per side



**STEP 23**

Reinstall fender flare retainer if needed



**STEP 24**

Reinstall one 7mm fender flare screw per side



**STEP 25**

Reinstall one ST15 fender flare screw



**STEP 26**

Reinstall radiator cover



**STEP 27**

Reinstall eleven radiator cover fasteners



**STEP 28**

The installation now is complete