

# INSTALLATION & CARE

## 2000-2004 MERCEDES-BENZ C-CLASS W203 LED TAIL LIGHT INSTALLATION INSTRUCTION

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	8 mm Socket	Trim Pad Remover	Flathead Screwdriver
			

### PRODUCT NUMBER

### LET'S START THE INSTALLATION



STEP 1

Remove the trunk liner mat



STEP 2

Remove the two plastic retainers



STEP 3

Remove the eight plastic retainers on the rear panel trim, four on each side



STEP 4

Remove the four plastic retainers on the rear panel trim



STEP 5

Remove the rear panel trim



STEP 6

Move aside the trunk lining carpet



**STEP 7**

Disconnect the tail light harness and remove the four 8mm tail light mounting nuts



**STEP 8**

Unseat and remove the factory tail light housing



**STEP 9**

Remove the washers from the factory tail light



**STEP 10**

Install the new tail light gasket



**STEP 11**

Install the washers from the factory tail lights



**STEP 12**

Seat the new tail light assembly in place



**STEP 13**

Reinstall the four 8mm tail light mounting nuts




**STEP 14**

Use alcohol to clean the metal surface



**STEP 15**

Set the new tail light resistor on the metal area

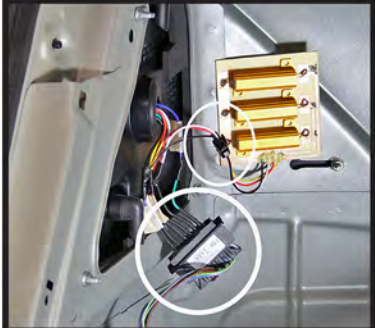


**STEP 16**

Connect the tail light and resistor harnesses



**STEP 17**

Reinstall the trunk lining carpet

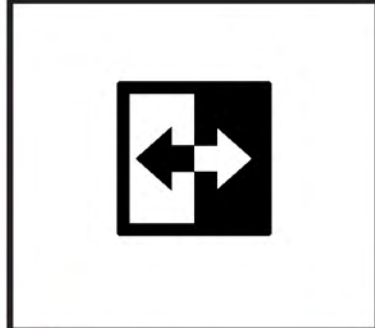

**STEP 18**

Please repeat the steps from 1 to 17 for the opposite side



**STEP 19**

Reinstall the rear panel trim



**STEP 20**

Reinstall the four plastic retainers on the rear panel trim



**STEP 21**

Reinstall the eight plastic retainers on the rear panel trim, four on each side



**STEP 22**

Reinstall the two plastic retainers



**STEP 23**

Reinstall the trunk liner mat



**STEP 24**

Close the trunk to complete the installation

