

SPEC-D *Tuning*

2009-2012 VW GOLF VI R8 PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

3/8" Drive Ratchet 6" Extension
1/4" Drive Ratchet
T25 Socket
T30 Socket

Product Part Numbers:

LHP-GLF10JM-8V2-TM

LHP-GLF10-8V2-TM



2009-2012 VW GOLF VI R8 PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop


Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

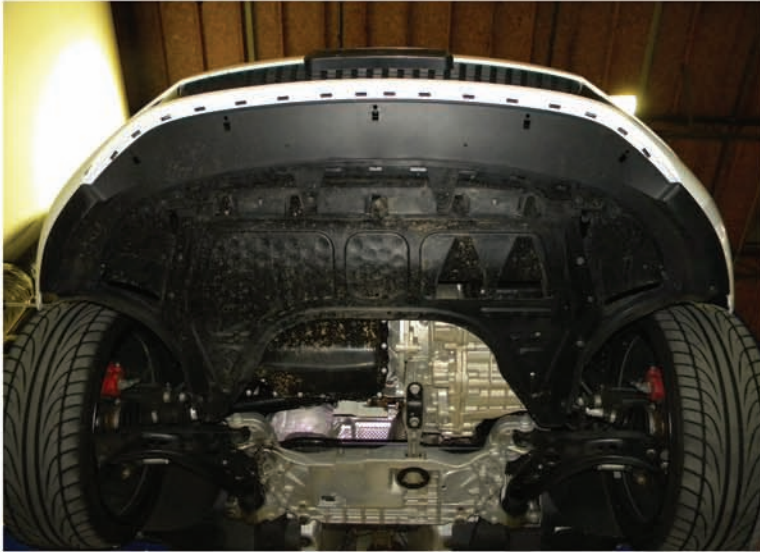

1. (10) T25 screw locations



2. Remove the (10) T25 screws



3. Remove the (3) T25 screws




4. Remove the T25 screw



5. Remove the (4) T25 screws



6. Remove the front grill

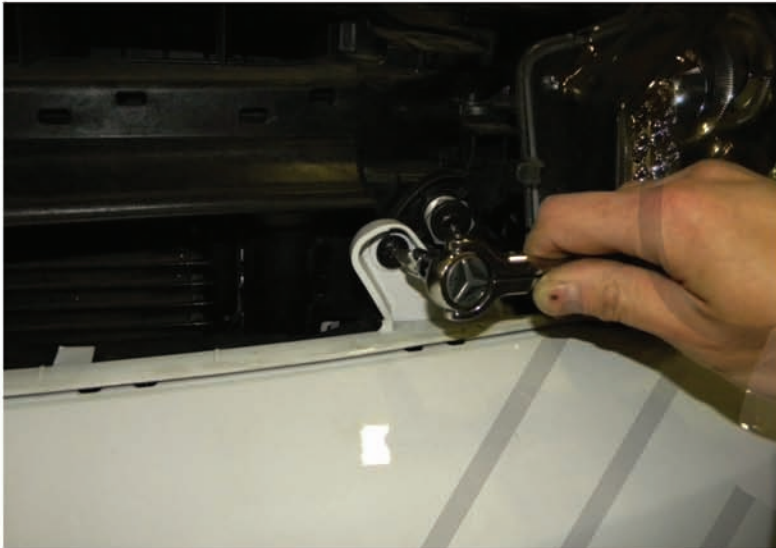

7. Remove the (2) T25 screws



8. Remove the front bumper slightly off car




9. Remove the (4) T30 bolts



10. Remove the T30 bolts



11. Remove the headlight

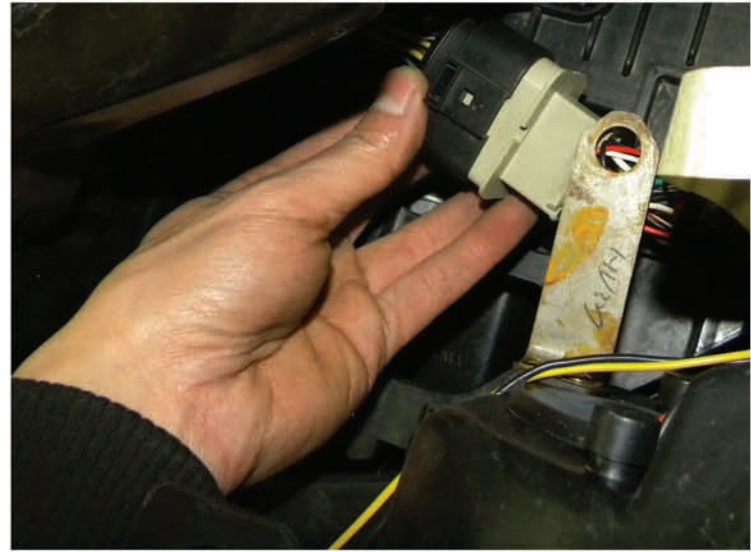

12. Disconnect the headlight harness



13. Place the new headlight in the stock location




14. Connect the headlight harness onto the new headlight
Please see the Halo and L.E.D installation instructions
If your headlights don't have HALO or L.E.D. You can skip it



15. Tighten the (4) T30 bolts



16.. Replace the front bumper

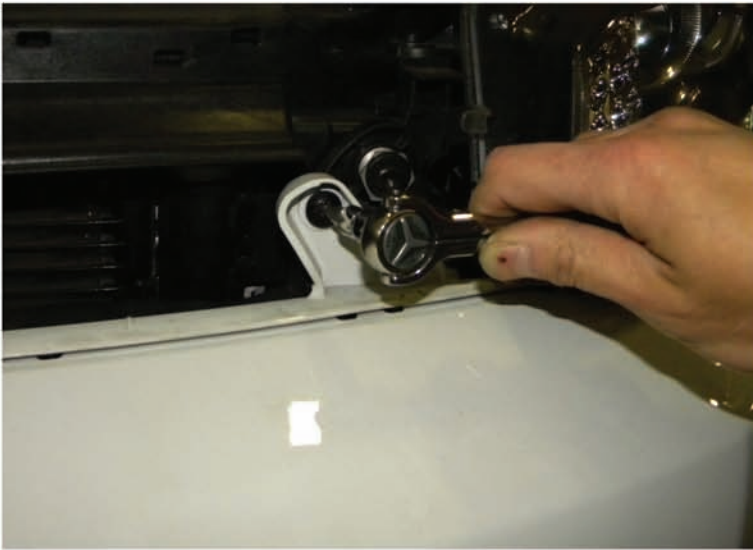

17. Replace 2 T25 screws. Replace the front grille



18. Tighten the (4) T25 screws



19. Tighten the T25 screw



20. Replace the (3) T25 screws



21. Tighten the (10) T25 screws



22. Please repeat the steps in order from 1 to 21 for the opposite side. The installation is now complete